


Quick Start Guide

TP808

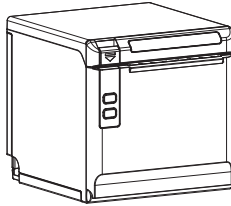

Xiamen Hanin Electronic Technology Co.,Ltd

ADD: Room 305A, Angye Building, Pioneering Park,
Torch High-tech Zone, Xiamen, China.


TEL: +86-(0)592-5885993

FAX: +86-(0)592-5885992


WEB: www.hpert.com

Appearance and Components


■ Front

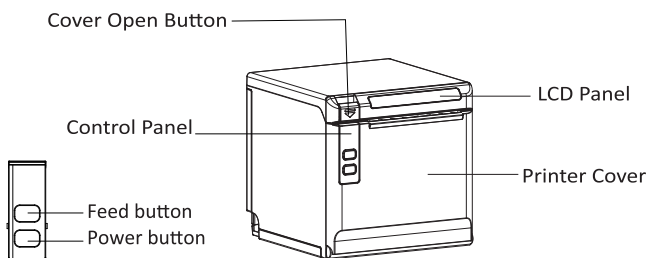


■ Inside

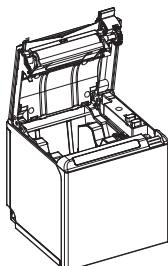


Packing List

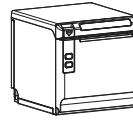

Printer

 

USB Cable

 

Power Cord



Power Adapter



Roll Paper



Quick Start Guide



CD

■ Optional Accessories




Serial Cable


Note: The power adapter and power cord vary by local or region.
The packing materials are actually dependent on the order.

■ Rear

Model 1: The printer without Bluetooth interface

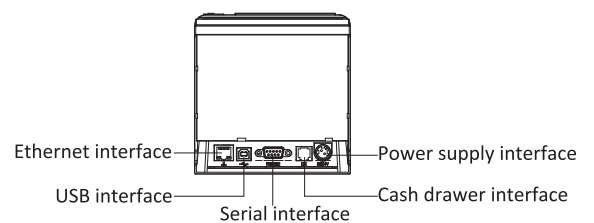


Model 2: The printer with Bluetooth interface/Wi-Fi

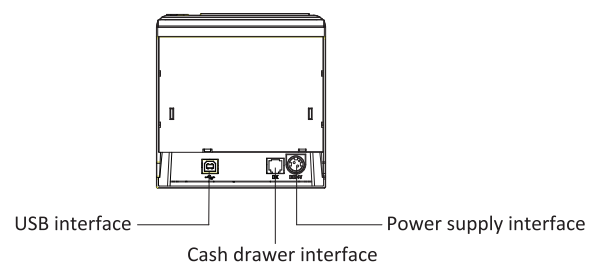


Paper Installation (Forward Paper-out Direction)


1.Press the Cover Open Button.

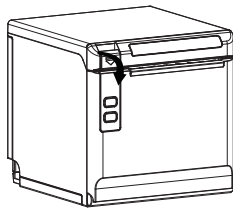


2.In the correct direction of the roll paper,install the roll paper.

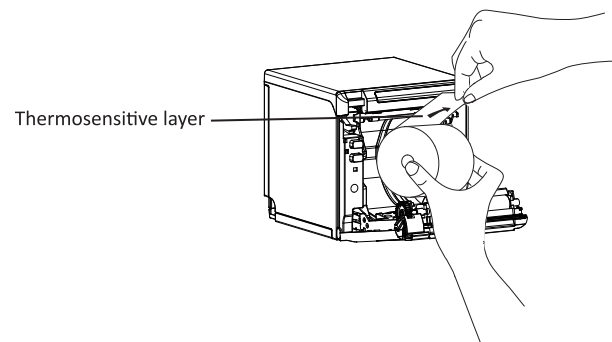

3.Pull out some roll paper, and close the printer cover.

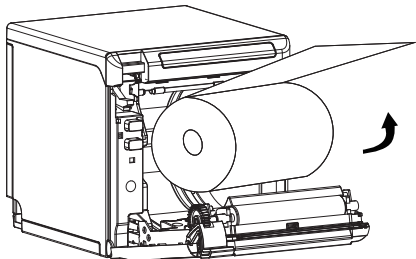

4.Tear the extra paper in the direction of printer.

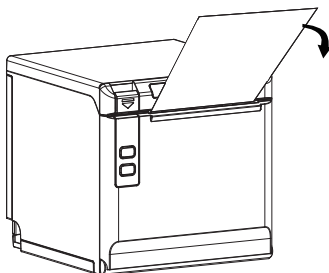

Bluetooth/Wi-Fi Settings

1.Blutetooth Settings

Default name: BT Printer
Default password: 0000 or 1234

Refer to HPRT POS Printer Bluetooth Manual.pdf for more details.

2.Wi-Fi Settings

(1) In AP mode, the factory default IP address is 192.168.1.1

(2) Open the browser to enter the default IP: 192.168.1.1 into the settings interface, the web interface login password is 12345678.

Refer to WIFI Operation Manual.pdf for more details.

Power Supply

- 1.Connect power adapter with printer.
- 2.Connect power adapter with power cord.
- 3.Plug the other side of power cord into the socket outlet.

